


Fitschenbänder 1. Hälfte 19. – 2. Hälfte 20. Jh.

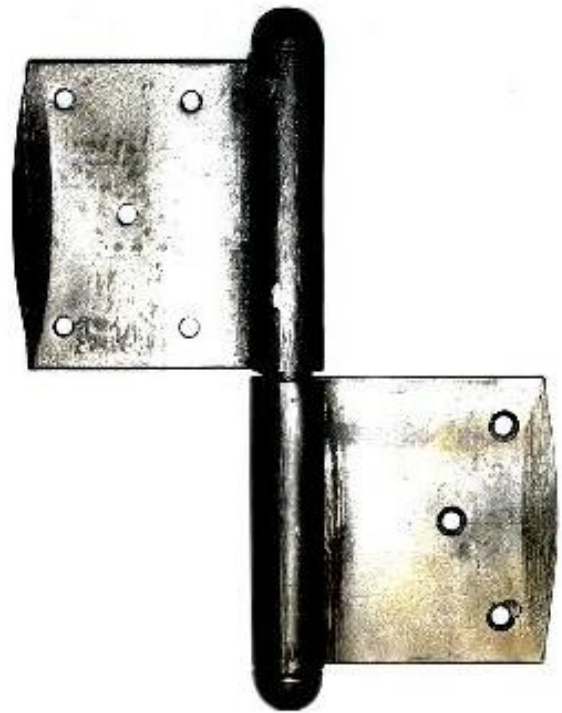

I-700



I-701



I-702



I-703