

Schuppenbänder / Lappenbänder 18. / 19. Jh.

I-100



I-101



I-102



I-103



I-104



I-105



I-106



I-107



I-108



I-109



I-110



I-111





I-112



I-113



I-114

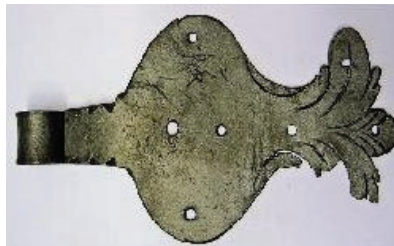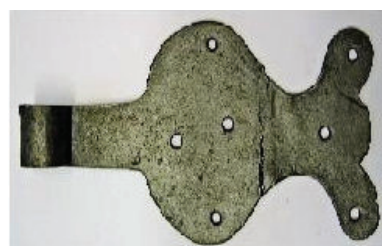

I-115



I-116



I-117

I-118

I-119

I-120

C- Bänder



I-200



I-201



I-202

Kreuzbänder 19. Jh.



I-300



I-301



I-302



I-303



I-304



I-305



I-306



I-307



I-308




I-309



I-310



I-311

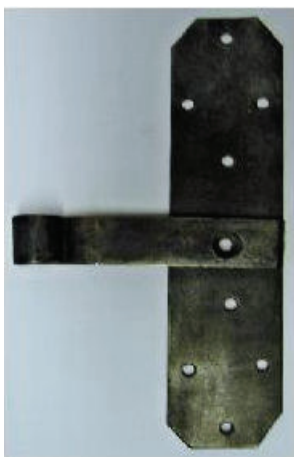

I-312



I-313



I-314



I-315



I-316



I-317



I-318



I-319



I-324



I-325



I-326



I-327



I-328



I-329

Kurz-und Langbänder



I-400



I-401



I-402



I-403



I-404



I-405



I-406

S-Bänder 17. – 19. Jh.



I-500



I-501



I-502



I-503



I-504



I-505



I-506

Kloben / Haspen



I-600 Nagelkloben



I-601 HolzKloben




I-602 StützKloben


Fitschenbänder 1. Hälfte 19. – 2. Hälfte 20. Jh.




I-700

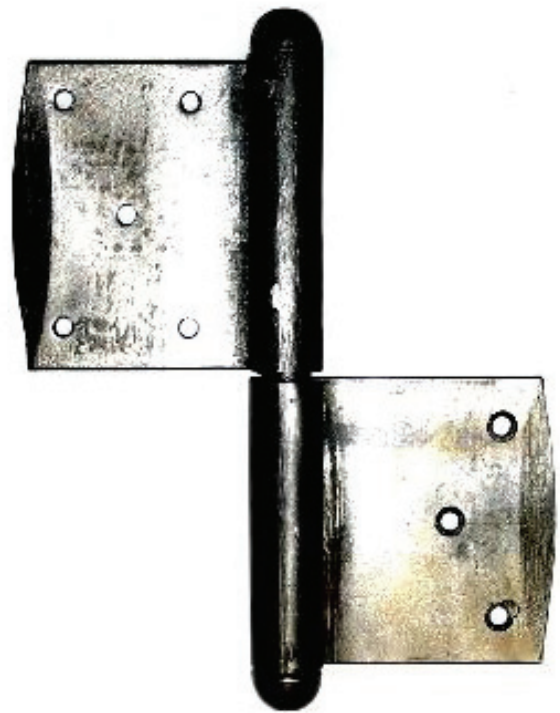

I-701

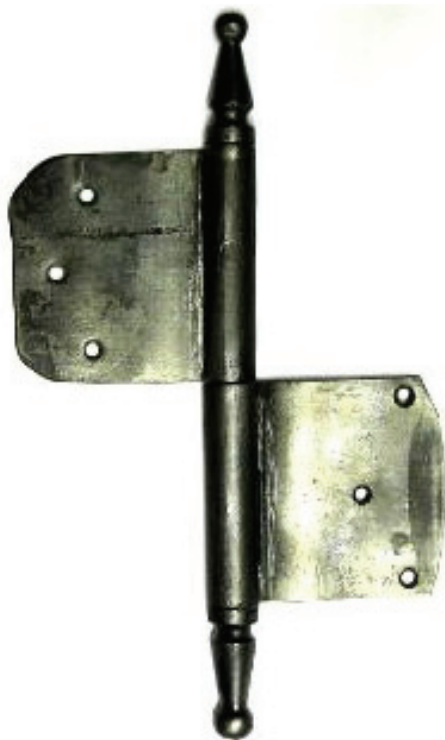

I-702

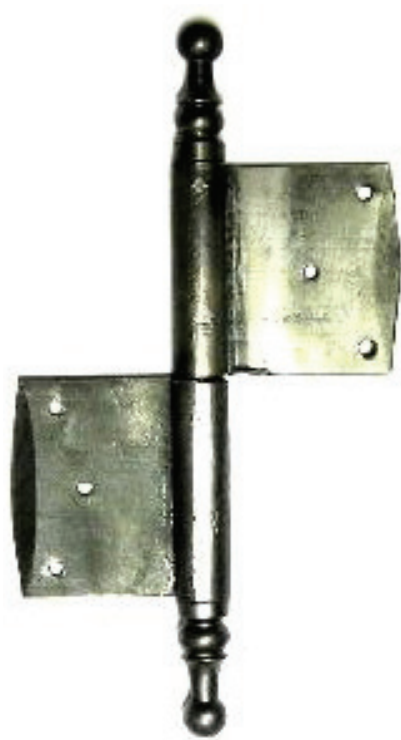

I-703

Türkantriegel



I-800/*



I-801/*



I-802/*



I-803/*



I-804/*



I-805/*

* = Länge des Treibriegels in mm

Bitte Stulpbreite angeben.